

INSTALLATION VIDEO



Installationsvideo
Video d'installation
Video d'installazione

Video de instalación
インストール動画
安装视频



CONTENTS





A x2
Velcro
Klettverschluss
ベルクロ
魔术贴

B x2
Velcro
Klettverschluss
ベルクロ
魔术贴

C x2
Booster
Amplificateur
Cuscinetti
Amplificador
ブースター
増強垫





Short cord on Left (L) speaker
Kurzes Kabel am linken (L) Lautsprecher
Cordon court sur haut-parleur gauche (L)
Cavo corto sull'altoparlante sinistro (L)
Cordón corto en el altavoces izquierdo (L)
左 (L) スピーカー上のショートコード
短線在左侧耳机上 (L)



-1-




Sold separately
Separat erhältlich
Vendu séparément
Venduto separatamente
Vendido por separado
別売り
单独出售

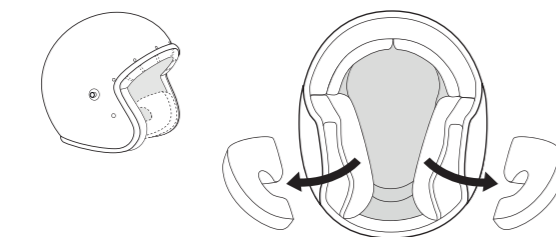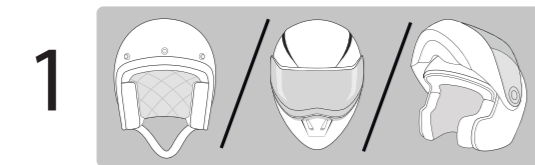


-2-

2 **A** x2

2a **A**

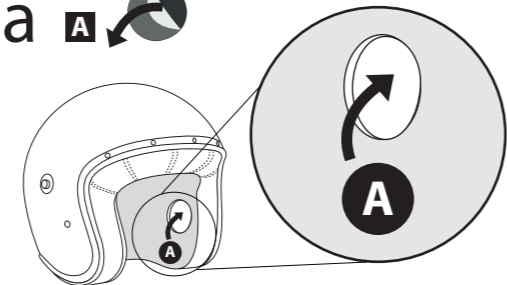


2b **A**

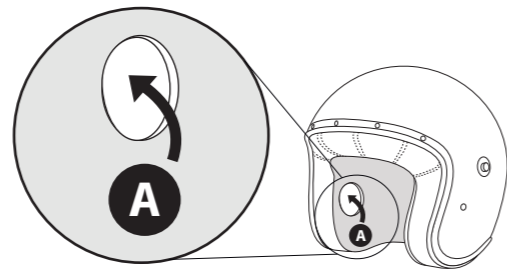


-3-

3 **F** **L** **R**


3a

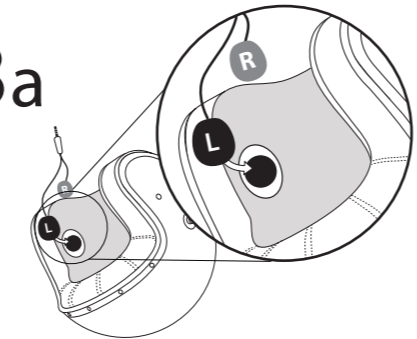

3b

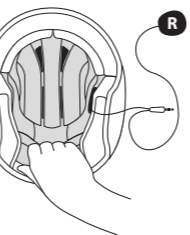


3c

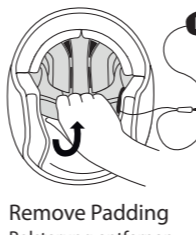


Remove Padding
Polsterung entfernen
Enlever le rembourrage
Quitar el relleno acolchado
Rimuovere l'imbottitura
パディングを取り除く
移除填充物

-4-


3d

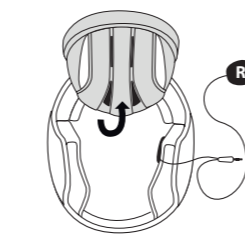


3e

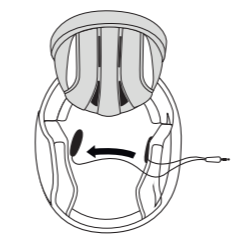

3f

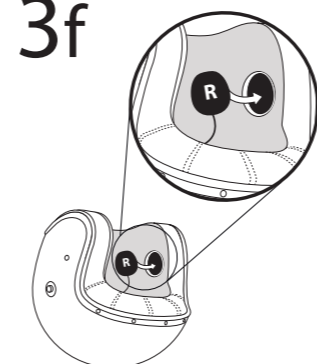

3g

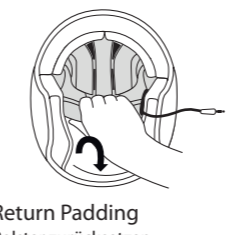


Return Padding
Polster zurücksetzen
Remettre le rembourrage
Volver a poner el relleno acolchado
Reinserire l'imbottitura
パディングを付けないおす
放回填充物

-5-


Option 1

Open face helmet installation
Installation an offenem Helm
Installation sur casque jet (open face)
Installazione su casco aperto
Instalación del casco abierto
オープンフェイスヘルメットへの取り付け
敞开式头盔安装

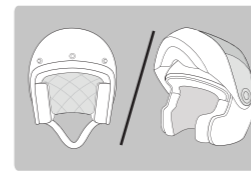

4 **B** x2 + **E**


4a **B** x2

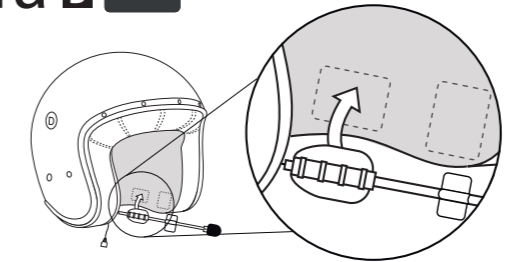


Place the mic to position the velcros
Platzieren Sie das Mikrofon, um die Klettverschlüsse zu positionieren
Placez le micro pour positionner les velcros
Posizionare il microfono per collocare i velcro
Colocar el micrófono para poner los velcros
マジックテープを位置づける為にマイクを付ける
放置麦克风以固定魔术贴

-6-

4b **E**

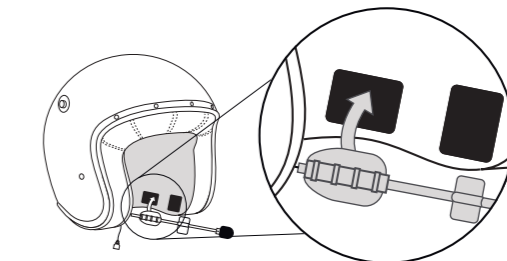

4c

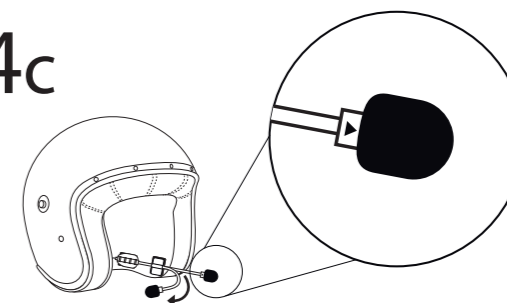

Arrow faces mouth
Pfeil zeigt zum Mund
La flèche doit faire face à la bouche
La freccia è rivolta verso la bocca
La flecha va a la boca
矢印が口に向かうように
箭头面向嘴部

-7-


Option 2

Full face helmet installation
Installation an Integralhelm
Installation sur casque intégral
Installazione su casco integrale
Instalación en el casco de cara completa
フルフェイスヘルメットへの取り付け
全面罩式头盔安装





4* **D** **B** x2

4a* **B**

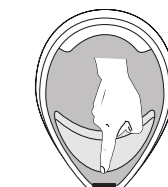

4b* **D**

4c*

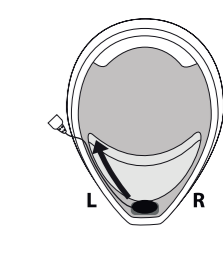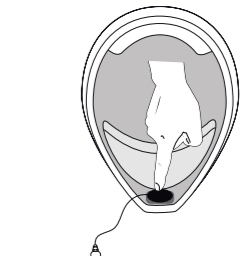


-8-

Measurements


front
90 mm

145 mm

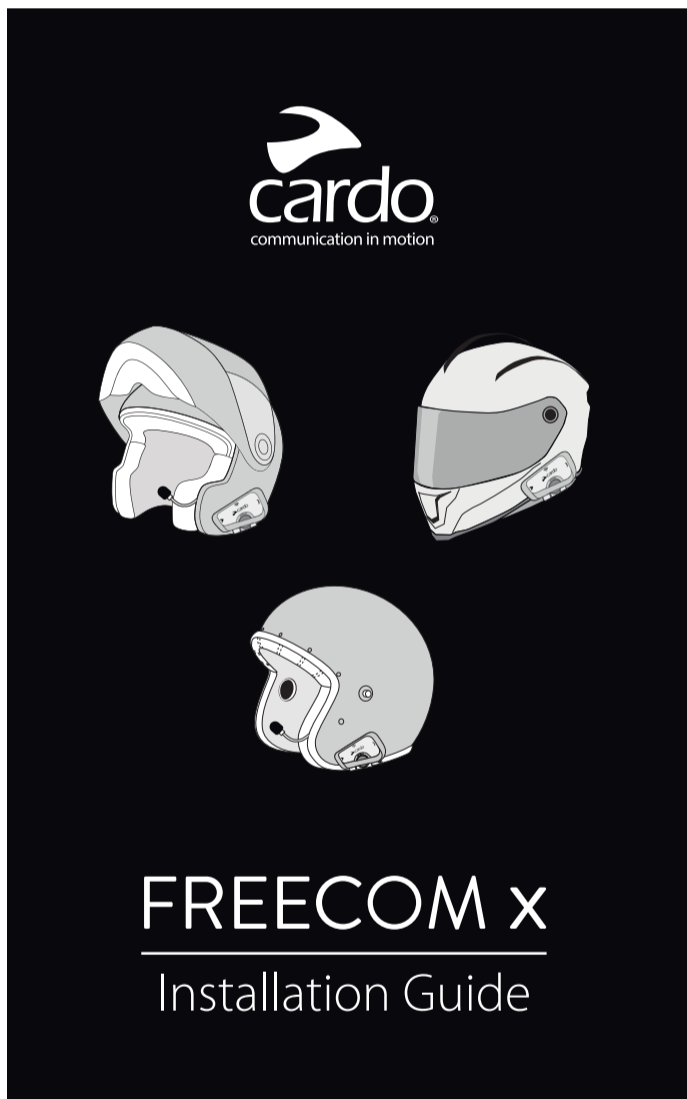

back
90 mm

145 mm

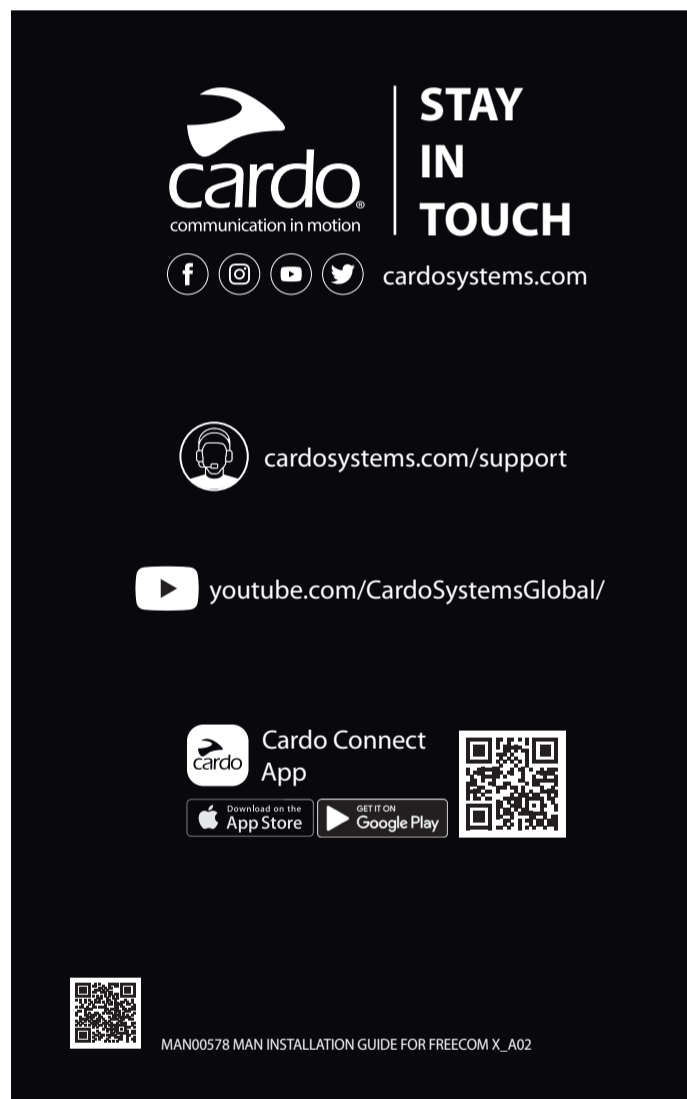

TYPE APPROVAL

P/N	MAN00578		
DESCRIPTION	INSTALLATION GUIDE		
FILE NAME	MAN00578 MAN INSTALLATION GUIDE FOR FREECOM X_A02		
LANGUAGE	illustration		
PRODUCT TYPE	MANUAL		
MATERIAL	P2 C1+1 80 gr offset folded		
PRINTING PROCESS	COLOR: BLACK / GRAY SCALE		
SECONDARY PROCESS	 		
ATTACHED FILES	1. GRAPHIC FILE - PDF 2. FOLLING INSTACTION VIDEO		
MEASUREMENT	SPREAD: 145MM-720MM , FOLDED: 145MM-90MM		
CLIENTS/ DISTRIBUTOR	 		
SPECIAL REQUIREMENT	 		
REVISION	DESCRIPTION	DATE	NAME
A02	FINAL	02.06.2021	Almog

Rev	Change Description	Date	Approved by
A01	first version	09.03.2021	Almog
A02	change the contant	02.06.2021	Almog